

## Lightning Kit

Check pin 1 Orientation before removing original chip and make sure no pins get bent when inserting new chip. Use a small flat tip screw driver to gently pry old chip out.

### ***Current Loop*** – 6 pin chip

---

Replaces:

- 4N26

### ***RS422/RS485*** – 8 pin chip

---

Replaces:

- DS75167BP
- SP485ES-L
- ISL81487EIPZ

Does Not Replace:

- MCT6
- PIC-12F629
- LTC1480

### ***RS232*** – 16 pin chip

---

Replaces:

- MAX232
- SP232-ACP
- ST232CN
- HIN232IPZ

Does Not Replace:

- MAX3232-CPE
- SP3232EEP

